

# System Setup

## **If I am using 2 fluids, how can I make sure that Auto Setup will work for either fluid?**

Independently adjust the pressure of the two tanks so that both fluids have the same flow rate. Enter the measured flow rate in the Configure Auto Setup menu. Any job that is created with Auto Setup will calculate the proper values regardless of which fluid is being used.

Unique solution ID: #1028

Author: Unist

Last update: 2020-03-11 13:52